LifeFitness

ARCTIC SILVER CROSS TRAINER 93XW-0XXX-02 (MADE IN HUNGARY)

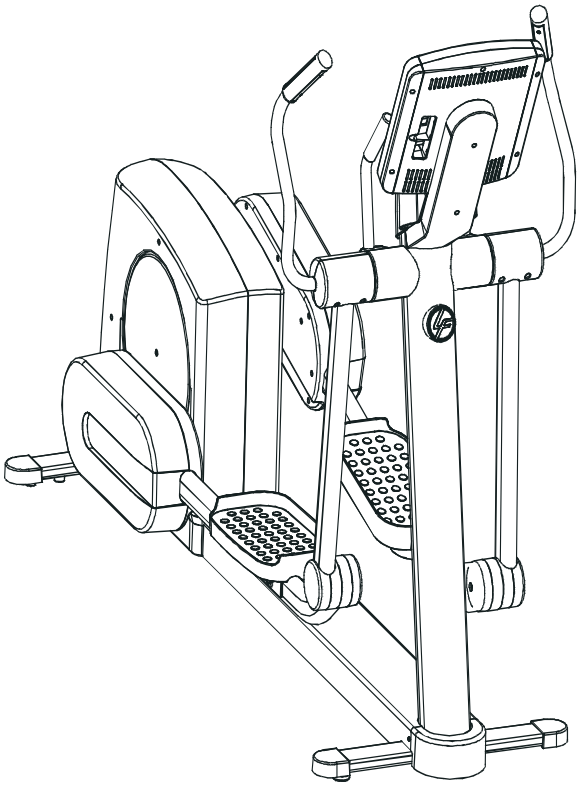

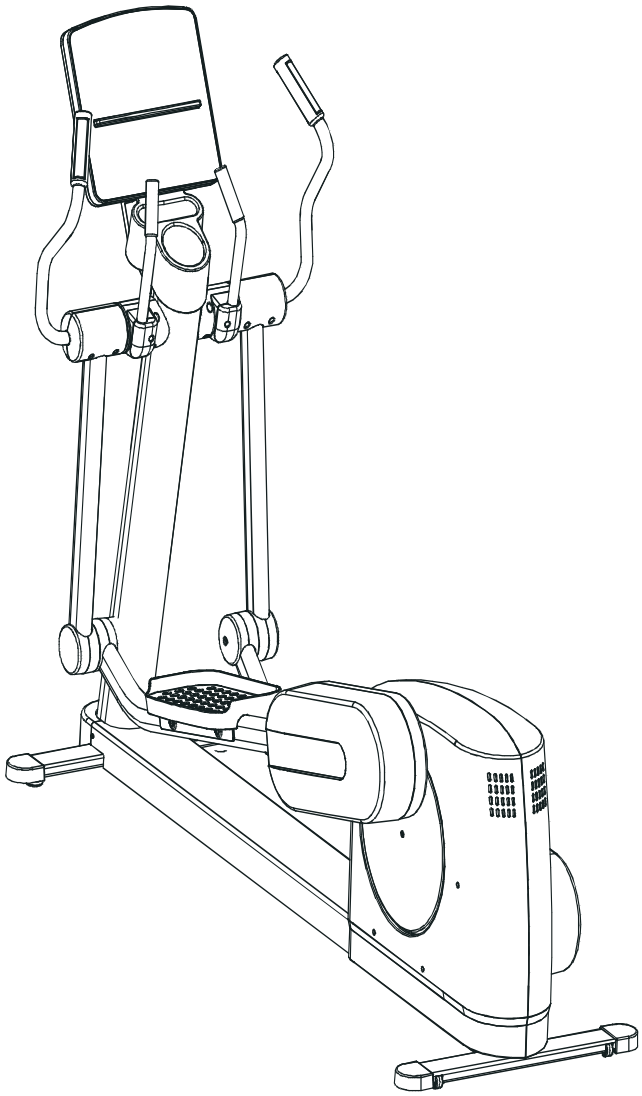

Customer Support Services

PARTS MANUAL rev 30 Jul 2008

OPERATION MANUAL	M051-00K62-A026
SERVICE MANUAL	M051-00K62-A060
TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE W/APPLICATOR .33 OZ PEN	 0017-00008-0204 0017-00008-0205 0017-00008-0206
PLUG IN OPTION	GK62-00002-0018
POWER CABLE W/BRACKET ASSY. ASSEMBLY CONSISTS OF: 1) COAX CABLE 2) POWER EXTENSION CABLE 3) ACCESS PANEL BRACKET 4) F TYPE CONNECTOR 5) PLASTIC GROMMET (QTY. 2)	AK62-00210-0000 AK32-00020-0002 AK32-00078-0001 0K62-01179-0001 0017-00021-2846 0017-00042-0754
HARDWARE BAG	AK62-00152-0001

NOTE: ADDING THE BOLT ON LCD SCREEN TO THE 93XW-0XXX-02 MAKES THE UNIT A 93XER-0XXX-02.

Page

CONSOLE SUPPORT & DEADSHAFT COVERS 4

HANDLEBARS AND BULLHORNS 5

CONSOLE AND RELATED COMPONENTS 6

UPPER FRAME HARDWARE 7

ROCKER ARMS AND PEDAL LEVERS 8

CRANK COVER AND LOWER CAPS 9

LOWER FRAME SHROUDS AND HARDWARE 10

PEDAL LEVER COMPONENTS 11

DRIVE MODULE COMPONENTS 12

DRIVE MODULE HARDWARE 13

CABLES 14

Note: The 93X has Telemetry only.

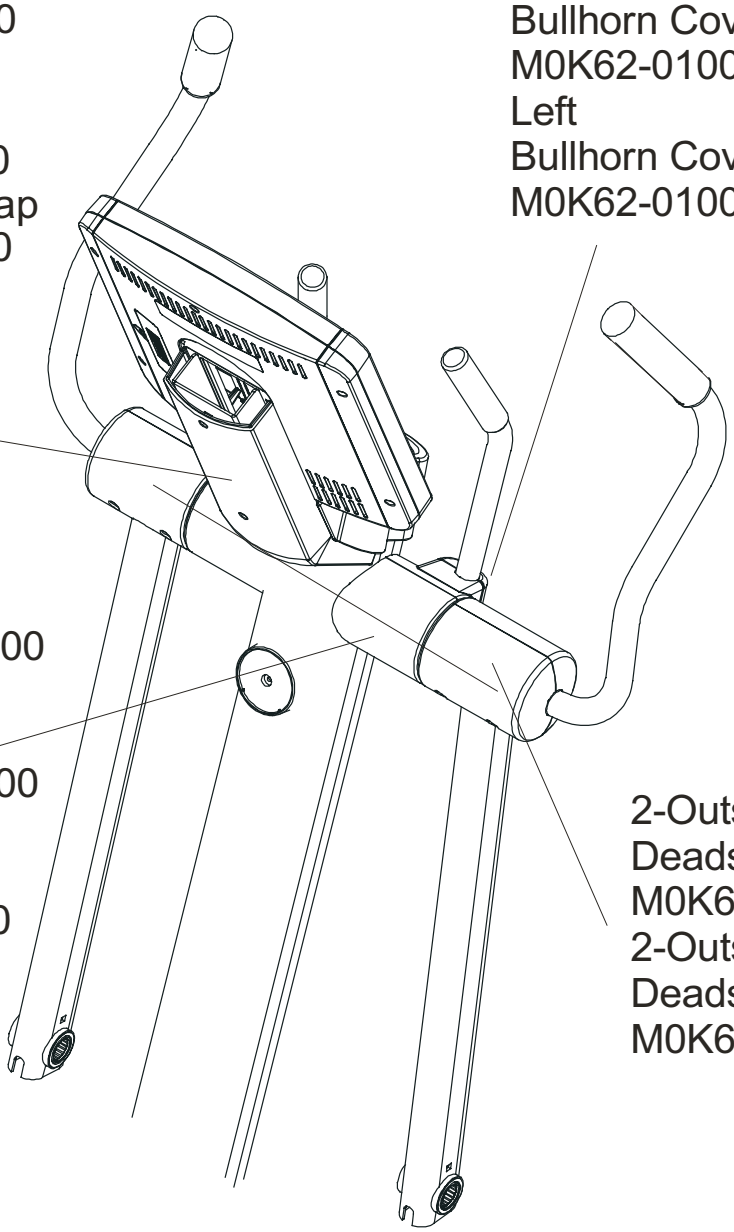

Console Support
MAK62-00123-0000
Console Support
Shroud
M0K62-01030-0000
Console Support Cap
M0K62-01023-0000

Right
Bullhorn Cover
M0K62-01007-0001
Left
Bullhorn Cover
M0K62-01008-0001

Right Inside
Deadshaft Cover
M0K62-01010-0000
Left Inside
Deadshaft Cover
M0K62-01011-0000
2-Front Inside
Deadshaft Cover
0K62-01009-0000

2-Outside Front
Deadshaft Cover
M0K62-01013-0000
2-Outside Rear
Deadshaft Cover
M0K62-01012-0000

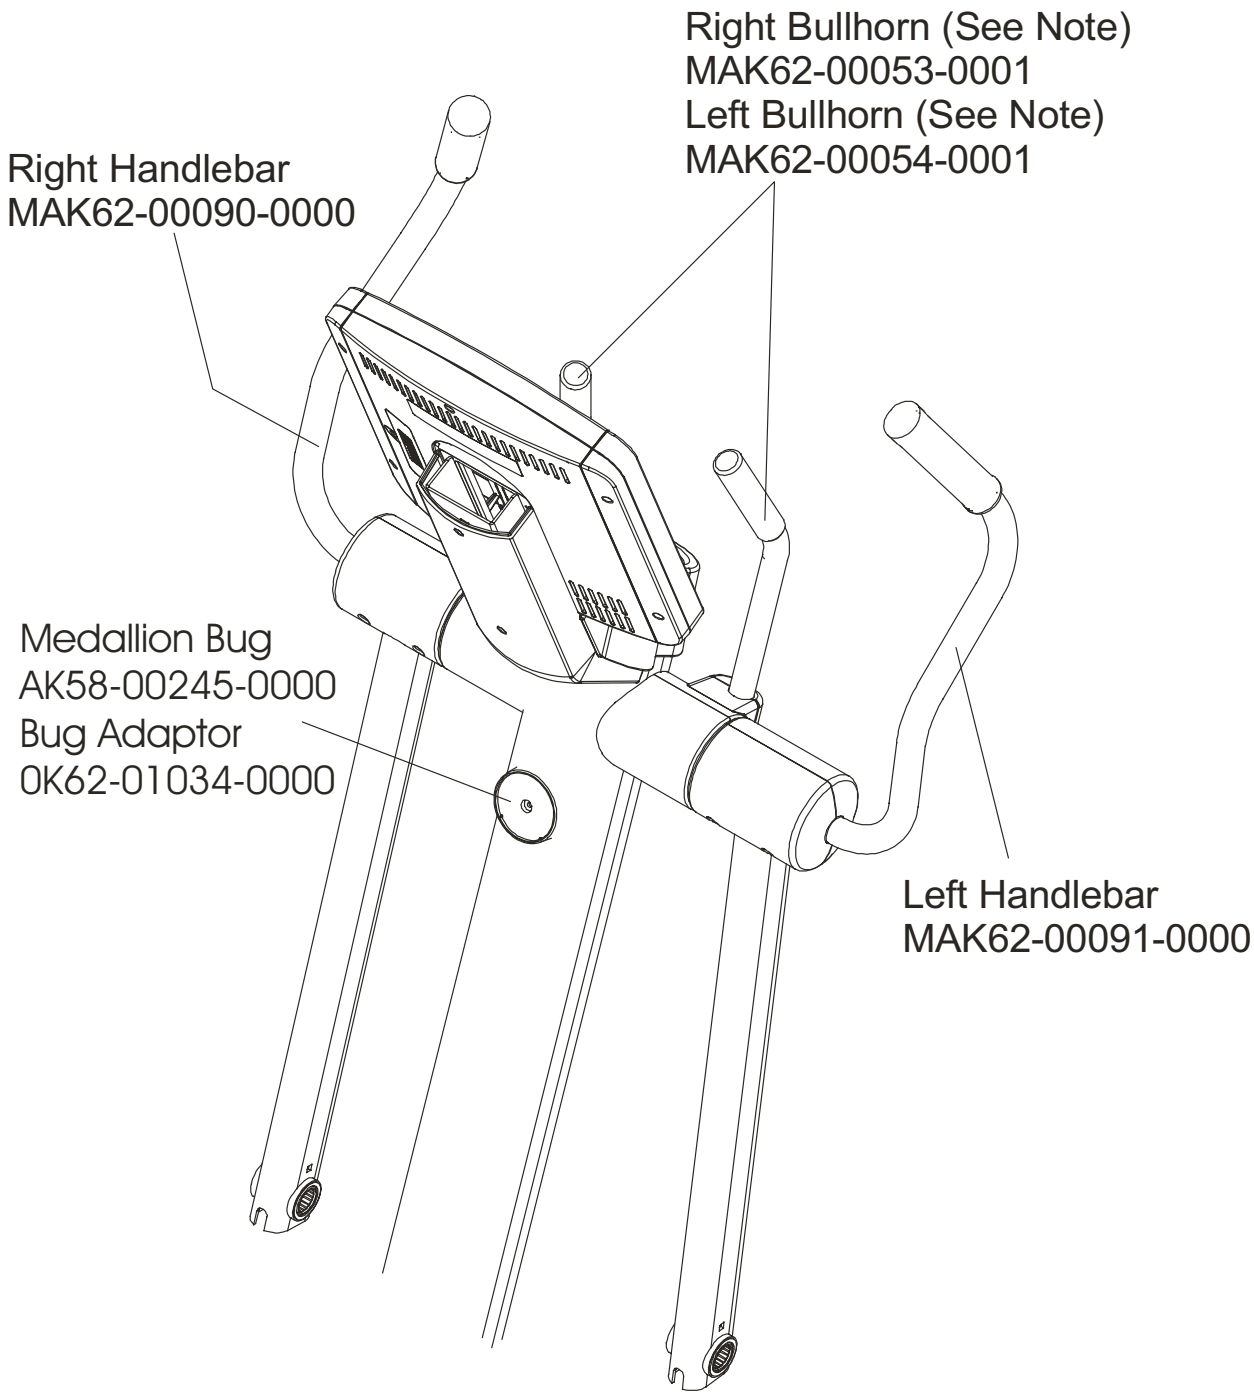

NOTE: The Right Bullhorn Assembly consists of: AK62-00057-0001 Bullhorn, M0K62-01136-0000 Grip, and M0K62-01199-0000 Gasket.

NOTE: The Left Bullhorn Assembly consists of: AK62-00058-0001 Bullhorn, M0K62-01136-0000 Grip and M0K62-01199-0000 Gasket

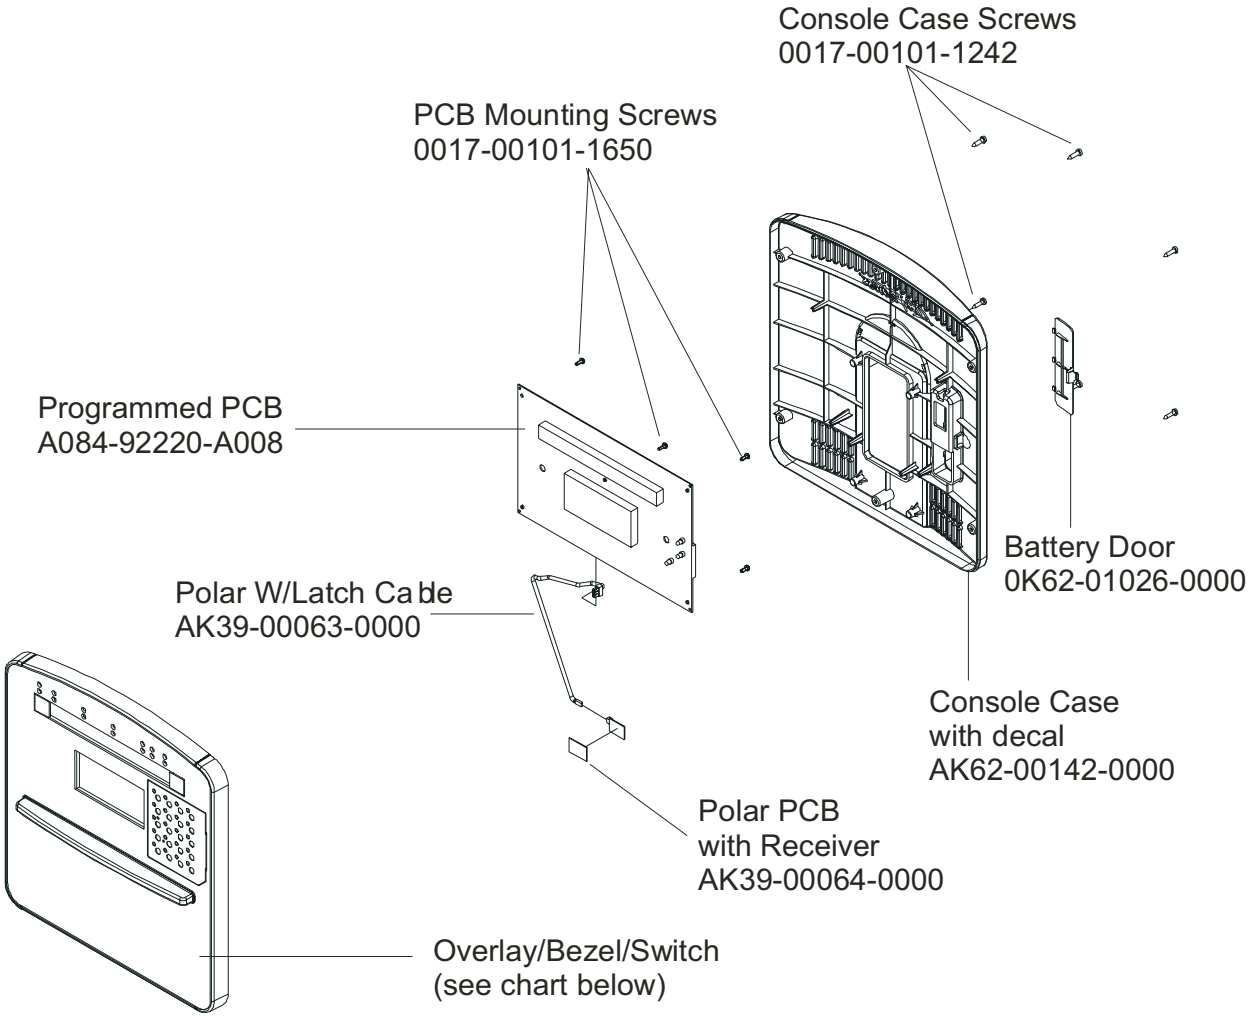

CONSOLE	OVERLAY/BEZEL/SWITCH	LANGUAGE
AK62-00150-0001,0002	AK62-00190-0001	Eng/Eng, Met
AK62-00150-0003	AK62-00190-0003	Ger/Met
AK62-00150-0004	AK62-00190-0004	Spn/Met
AK62-00150-0006	AK62-00190-0006	Jap/Met
AK62-00150-0007	AK62-00190-0007	Frn/Met
AK62-00150-0008	AK62-00190-0008	Ital/Met
AK62-00150-0009	AK62-00190-0009	Dut/Met
AK62-00150-0010	AK62-00190-0010	Port/Met

Items Not Shown	
Accessory Tray	M0K62-01022-0000
Accessory Tray Mounting Screws (2)	0017-00101-1846

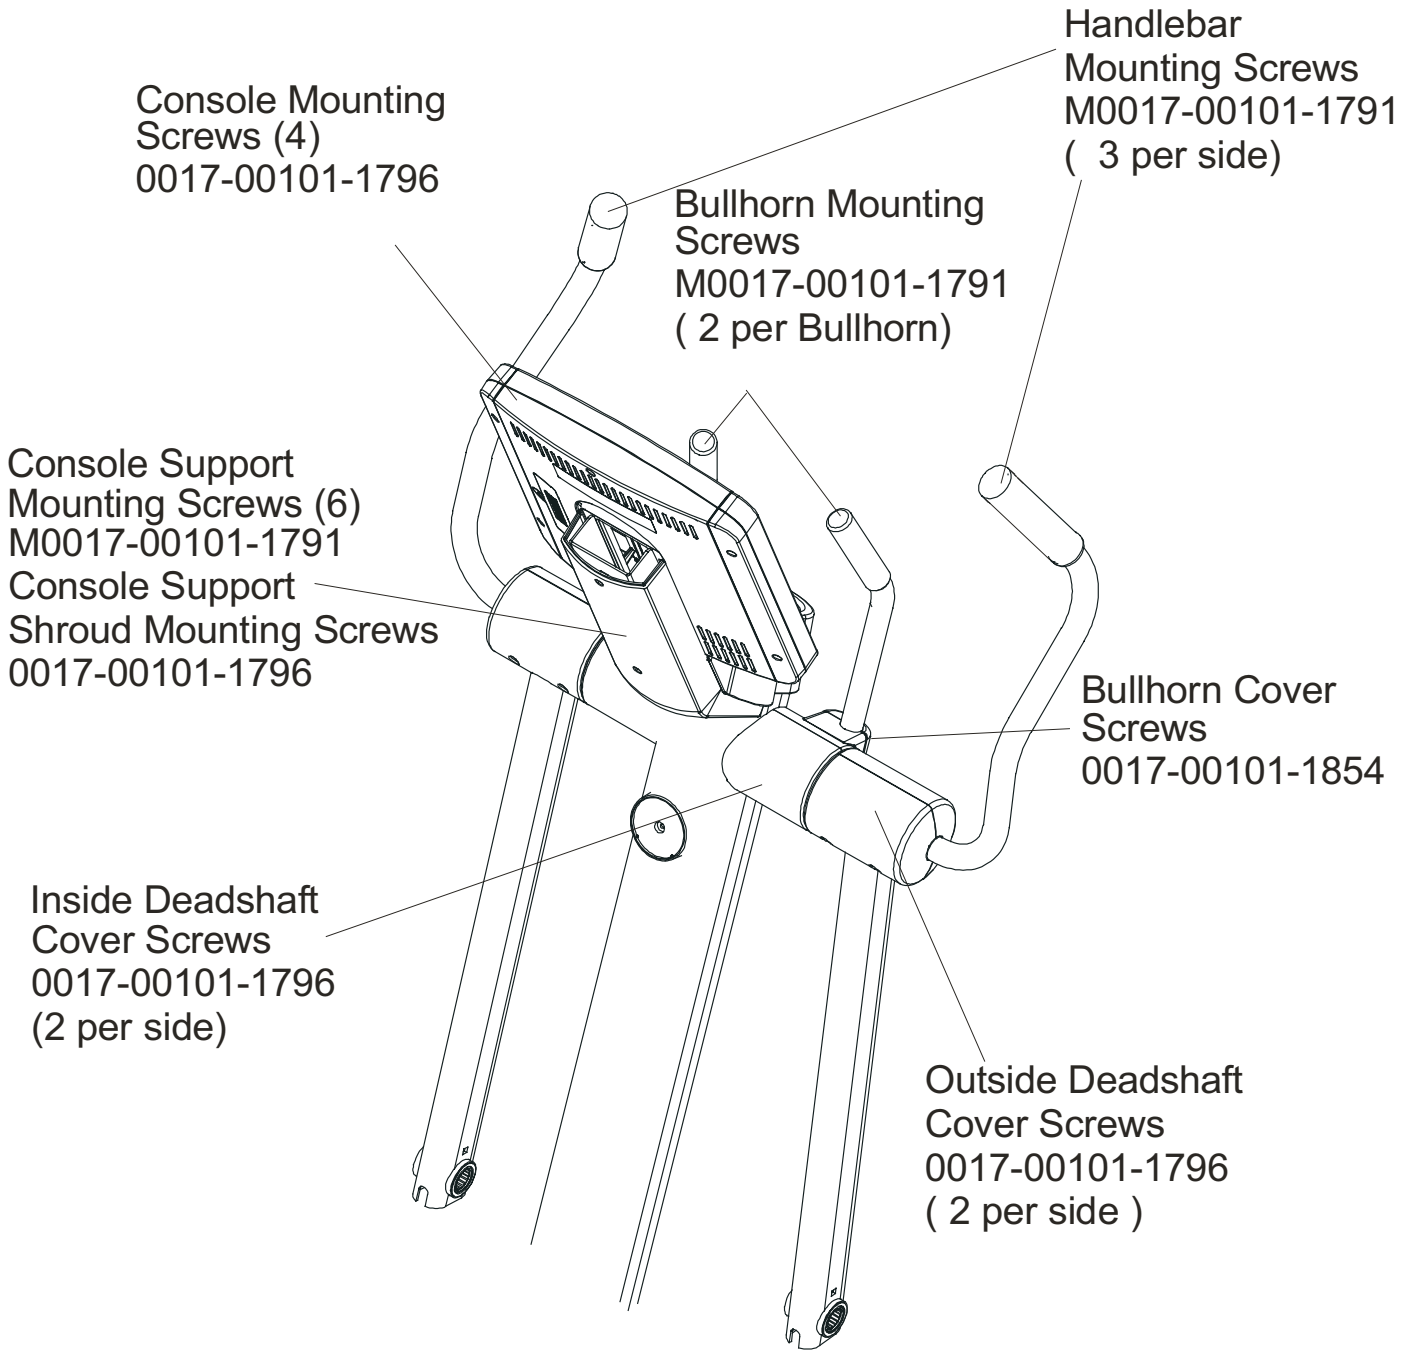
Handlebar Mounting Screws M0017-00101-1791 (3 per side)
Console Mounting Screws (4) 0017-00101-1796
Bullhorn Mounting Screws M0017-00101-1791 (2 per Bullhorn)
Console Support Mounting Screws (6) M0017-00101-1791
Console Support Shroud Mounting Screws 0017-00101-1796
Bullhorn Cover Screws 0017-00101-1854
Inside Deadshaft Cover Screws 0017-00101-1796 (2 per side)
Outside Deadshaft Cover Screws 0017-00101-1796 (2 per side)

Rocker Arms Kit
GK62-00002-0070
contents:
- Rocker Arms (2)
- Hardened Spacers (2)
- Oilite Washers (2)
- Retaining Rings (2)
- *Loctite 620*
- Alcohol pad

Rocker Arms
AK62-00002-0070
Shaft Collar w/Screws
0K61-01259-0000

Right Pedal
Lever Assembly
MAK62-00022-0000

LF Bug
Medallion Assembly
AK58-00245-0000

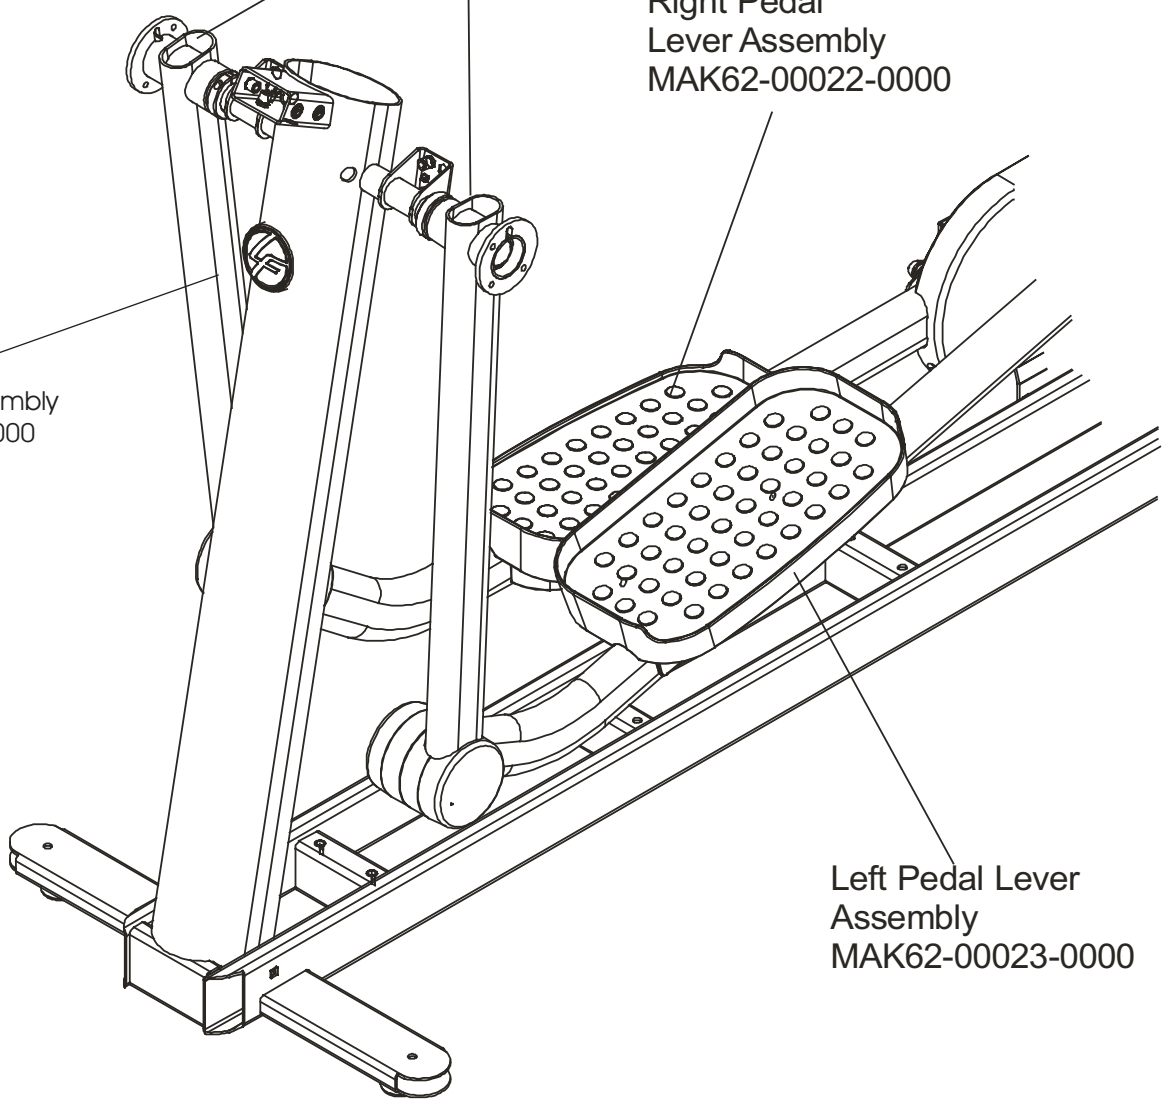

Left Pedal Lever
Assembly
MAK62-00023-0000

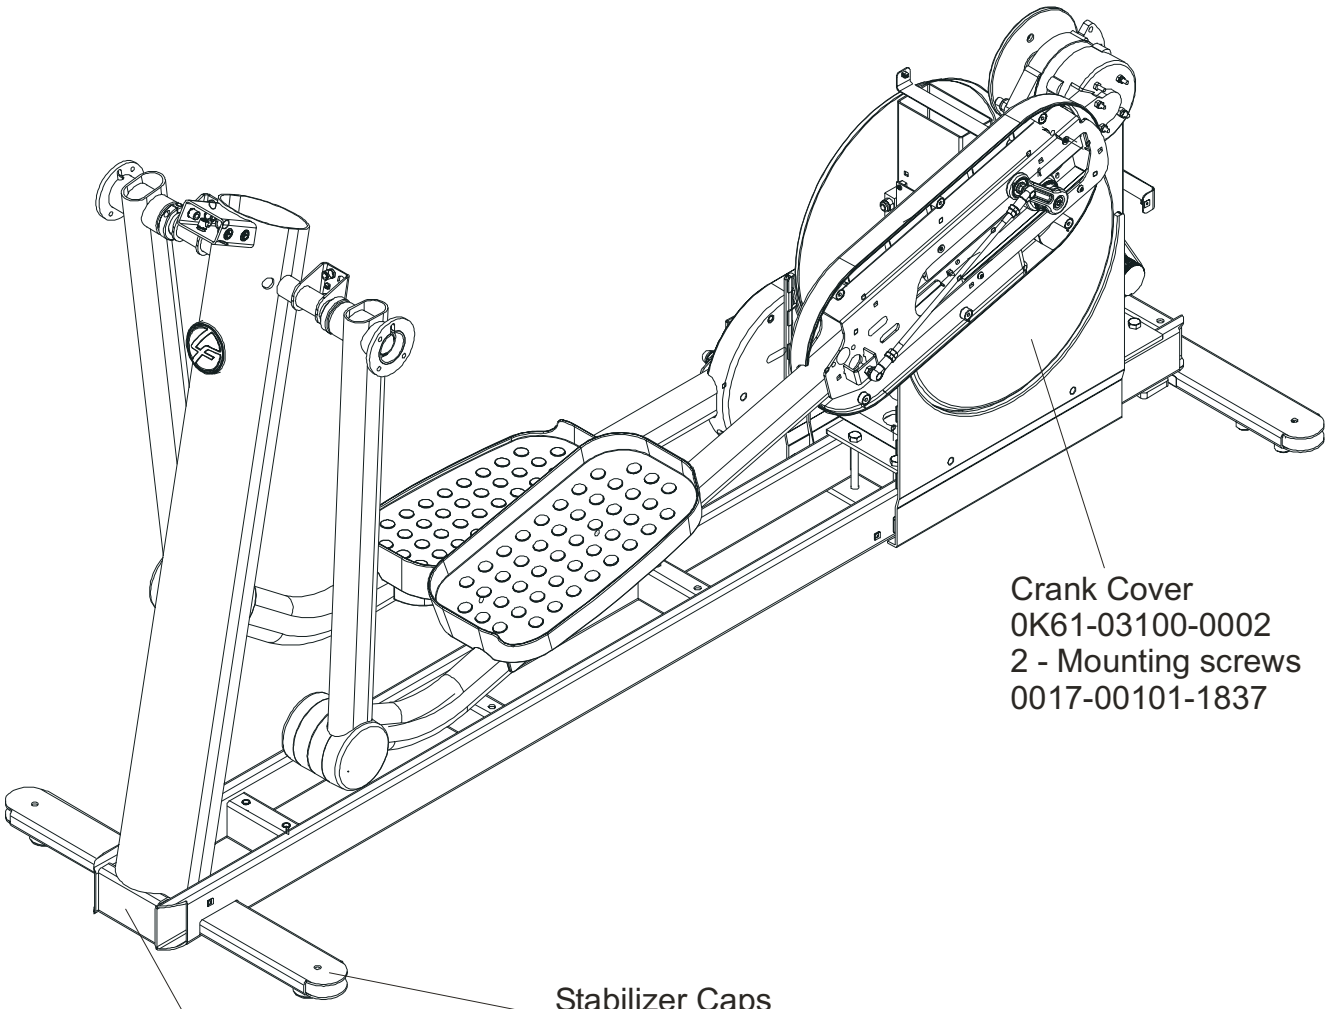

Crank Cover
0K61-03100-0002
2 - Mounting screws
0017-00101-1837

Stabilizer Caps
4 - 0K62-01003-0000

Front frame Cap
M0K62-01004-0000
Mounting Screws (2)
(Located on front sides of Ladder Frame Cover)
0017-00101-1795

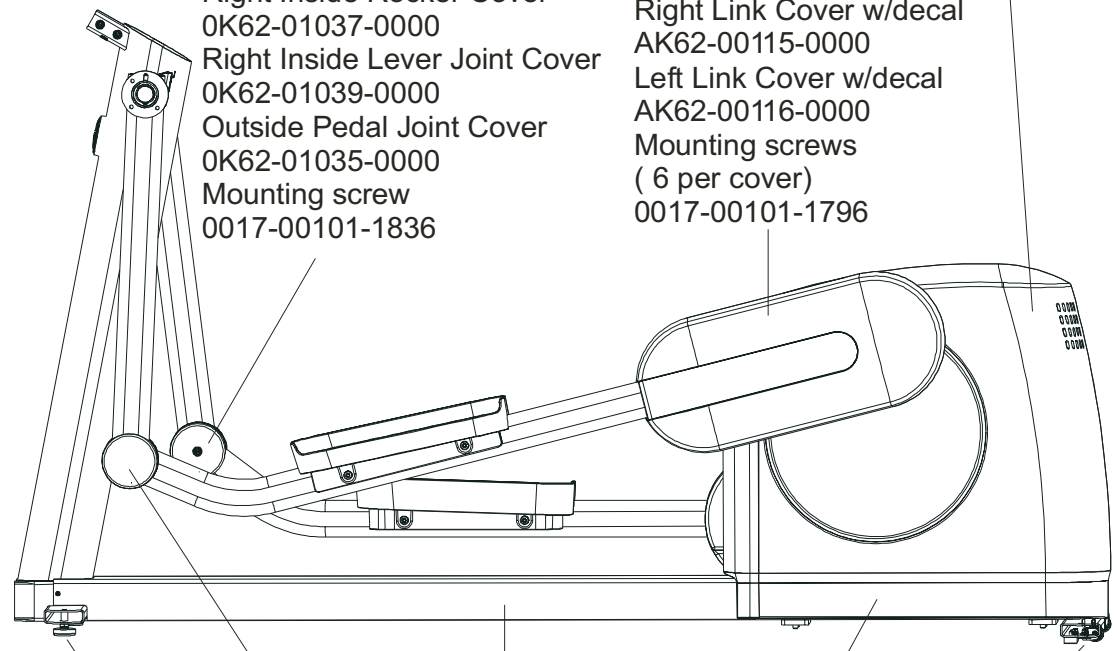

Rear Shroud Assy.
AK62-00223-0000
Mounting screws
(2 per side)
0017-00101-1796

Outside Rocker Cover w/clip
AK62-00188-0001
Mounting screw
0017-00101-1796
Right Inside Rocker Cover
0K62-01037-0000
Right Inside Lever Joint Cover
0K62-01039-0000
Outside Pedal Joint Cover
0K62-01035-0000
Mounting screw
0017-00101-1836

Right Link Cover w/decal
AK62-00115-0000
Left Link Cover w/decal
AK62-00116-0000
Mounting screws
(6 per cover)
0017-00101-1796

Leg Levelers
AK62-00124-0000

Ladder Frame Cover w/decal
MAK62-00106-0001
4 - Mounting screws
0017-00101-1795

Wheel/Bracket Assy.
MAK62-00102-0000
Mounting Screws
(3 per assy.)
0017-00101-1789

Outside Rocker Cover w/clip
AK62-00188-0001
Mounting screw
0017-00101-1796
Left Inside Rocker Cover
0K62-01038-0000
Left Inside Lever Joint Cover
0K62-01040-0000
Outside Pedal Joint Cover
0K62-01035-0000
Mounting Screw
0017-00101-1836

Shroud Panel
0K62-01002-0003
Mounting screws
(2 per side)
0017-00101-1795

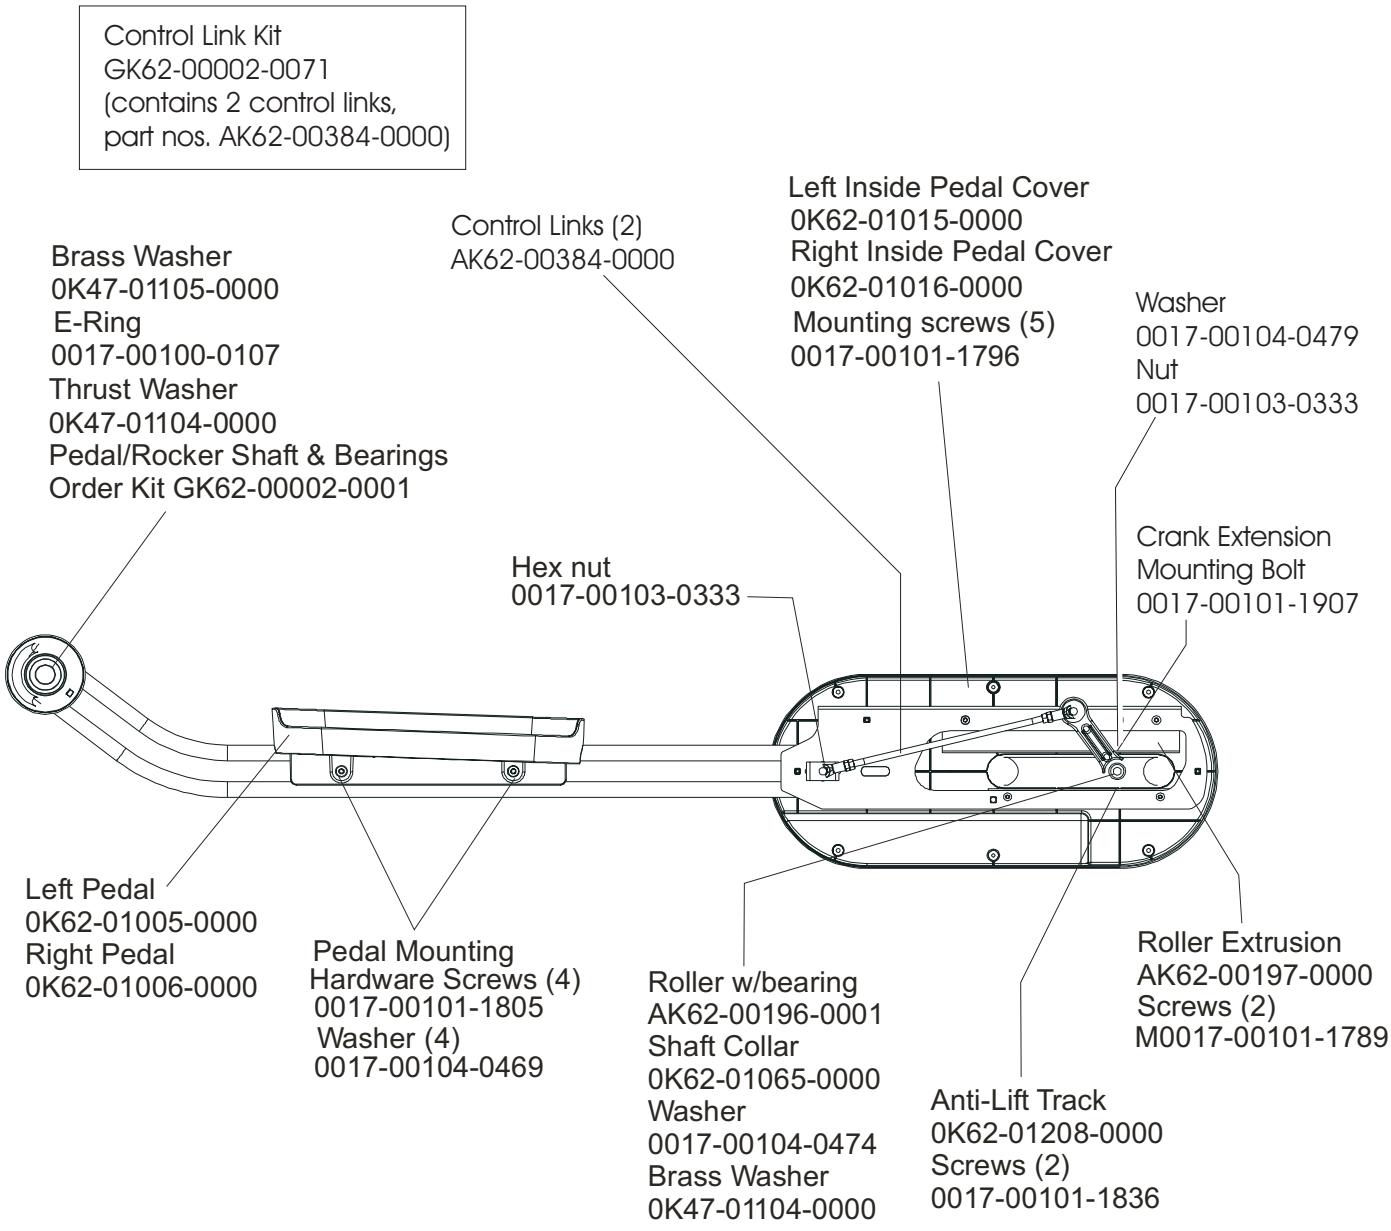
Control Link Kit
GK62-00002-0071
(contains 2 control links,
part nos. AK62-00384-0000)
Brass Washer
0K47-01105-0000
E-Ring
0017-00100-0107
Thrust Washer
0K47-01104-0000
Pedal/Rocker Shaft & Bearings
Order Kit GK62-00002-0001
Control Links (2)
AK62-00384-0000
Left Inside Pedal Cover
0K62-01015-0000
Right Inside Pedal Cover
0K62-01016-0000
Mounting screws (5)
0017-00101-1796
Washer
0017-00104-0479
Nut
0017-00103-0333
Crank Extension
Mounting Bolt
0017-00101-1907
Hex nut
0017-00103-0333
Left Pedal
0K62-01005-0000
Right Pedal
0K62-01006-0000
Pedal Mounting
Hardware Screws (4)
0017-00101-1805
Washer (4)
0017-00104-0469
Roller w/bearing
AK62-00196-0001
Shaft Collar
0K62-01065-0000
Washer
0017-00104-0474
Brass Washer
0K47-01104-0000
Anti-Lift Track
0K62-01208-0000
Screws (2)
0017-00101-1836
Roller Extrusion
AK62-00197-0000
Screws (2)
M0017-00101-1789

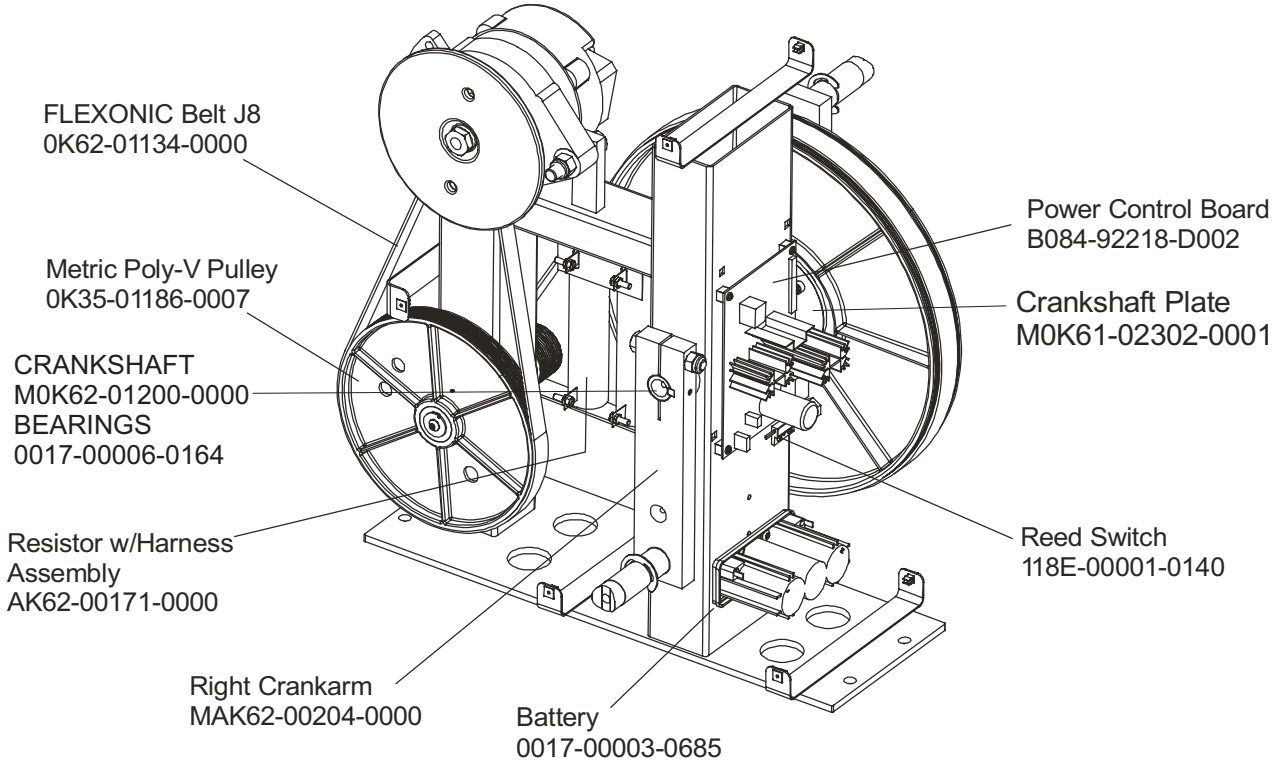
FLEXONIC Belt J8
0K62-01134-0000
Metric Poly-V Pulley
0K35-01186-0007
CRANKSHAFT
M0K62-01200-0000
BEARINGS
0017-00006-0164
Resistor w/Harness
Assembly
AK62-00171-0000
Right Crankarm
MAK62-00204-0000
Battery
0017-00003-0685
Power Control Board
B084-92218-D002
Crankshaft Plate
M0K61-02302-0001
Reed Switch
118E-00001-0140

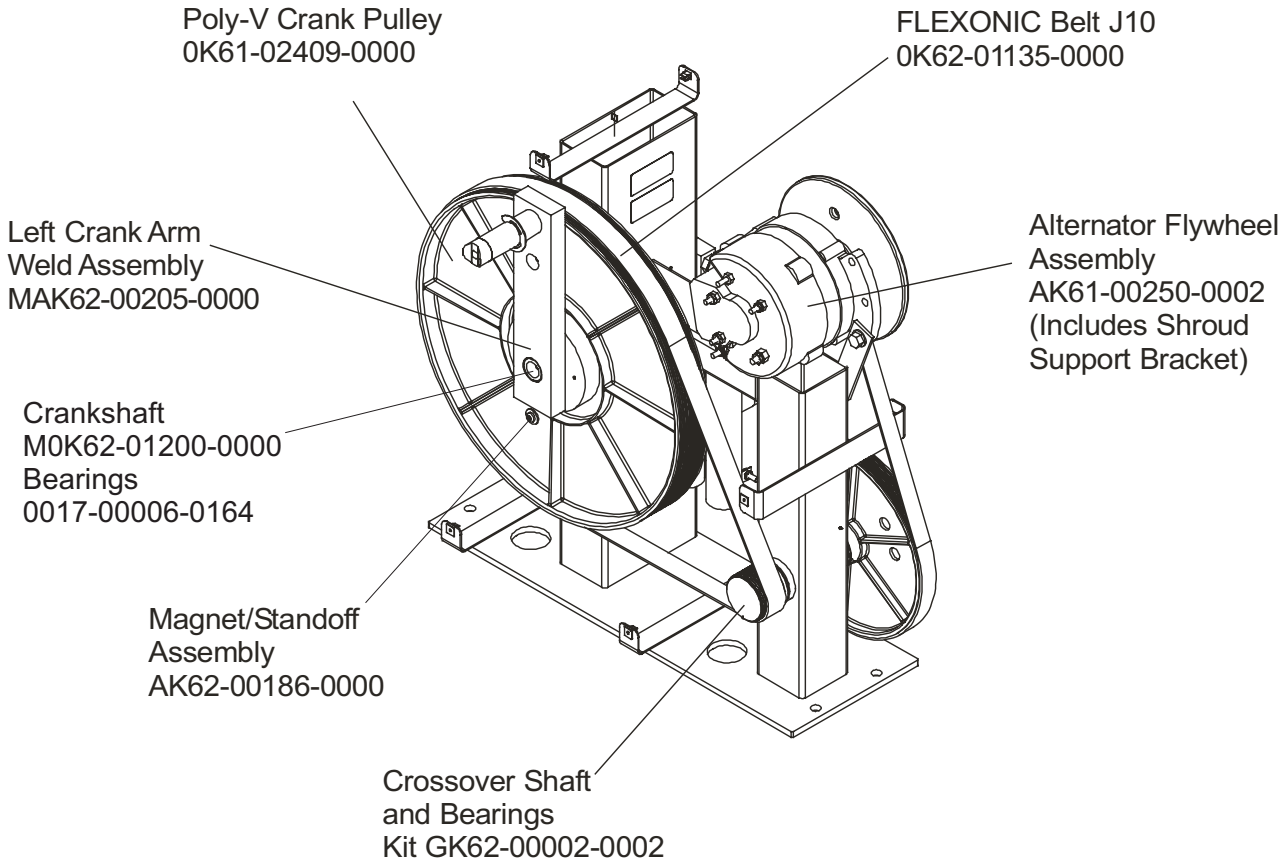
Poly-V Crank Pulley
0K61-02409-0000
FLEXONIC Belt J10
0K62-01135-0000
Left Crank Arm
Weld Assembly
MAK62-00205-0000
Crankshaft
M0K62-01200-0000
Bearings
0017-00006-0164
Magnet/Standoff
Assembly
AK62-00186-0000
Crossover Shaft
and Bearings
Kit GK62-00002-0002
Alternator Flywheel
Assembly
AK61-00250-0002
(Includes Shroud
Support Bracket)

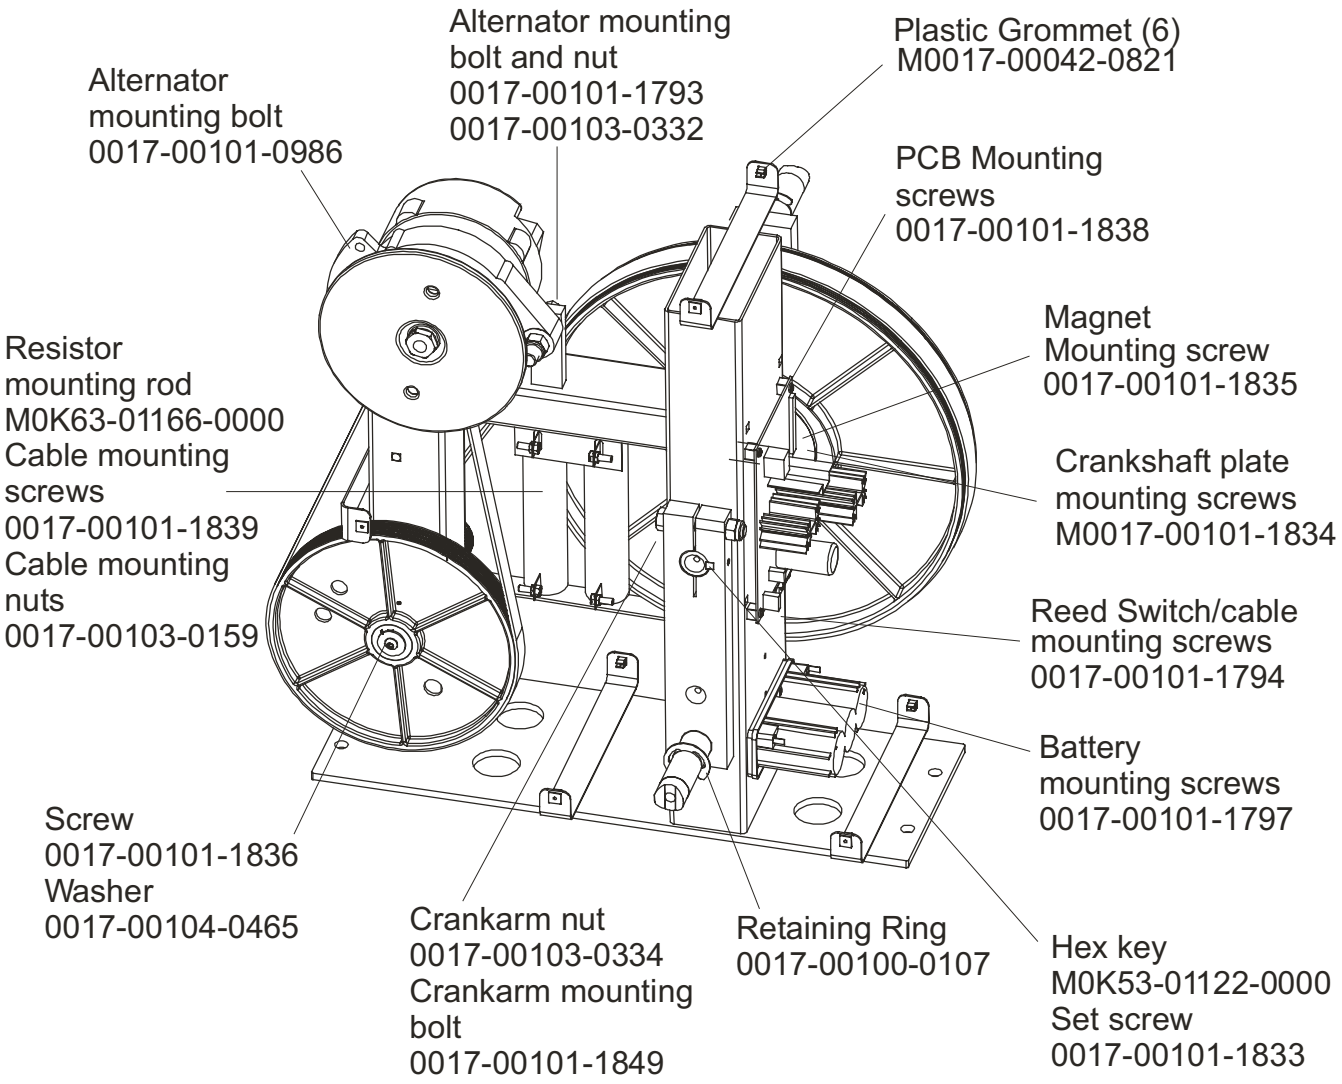
Alternator mounting bolt and nut
0017-00101-1793
0017-00103-0332
Plastic Grommet (6)
M0017-00042-0821
Alternator mounting bolt
0017-00101-0986
PCB Mounting screws
0017-00101-1838
Magnet Mounting screw
0017-00101-1835
Resistor mounting rod
M0K63-01166-0000
Cable mounting screws
0017-00101-1839
Cable mounting nuts
0017-00103-0159
Crankshaft plate mounting screws
M0017-00101-1834
Reed Switch/cable mounting screws
0017-00101-1794
Battery mounting screws
0017-00101-1797
Screw
0017-00101-1836
Washer
0017-00104-0465
Crankarm nut
0017-00103-0334
Crankarm mounting bolt
0017-00101-1849
Retaining Ring
0017-00100-0107
Hex key
M0K53-01122-0000
Set screw
0017-00101-1833

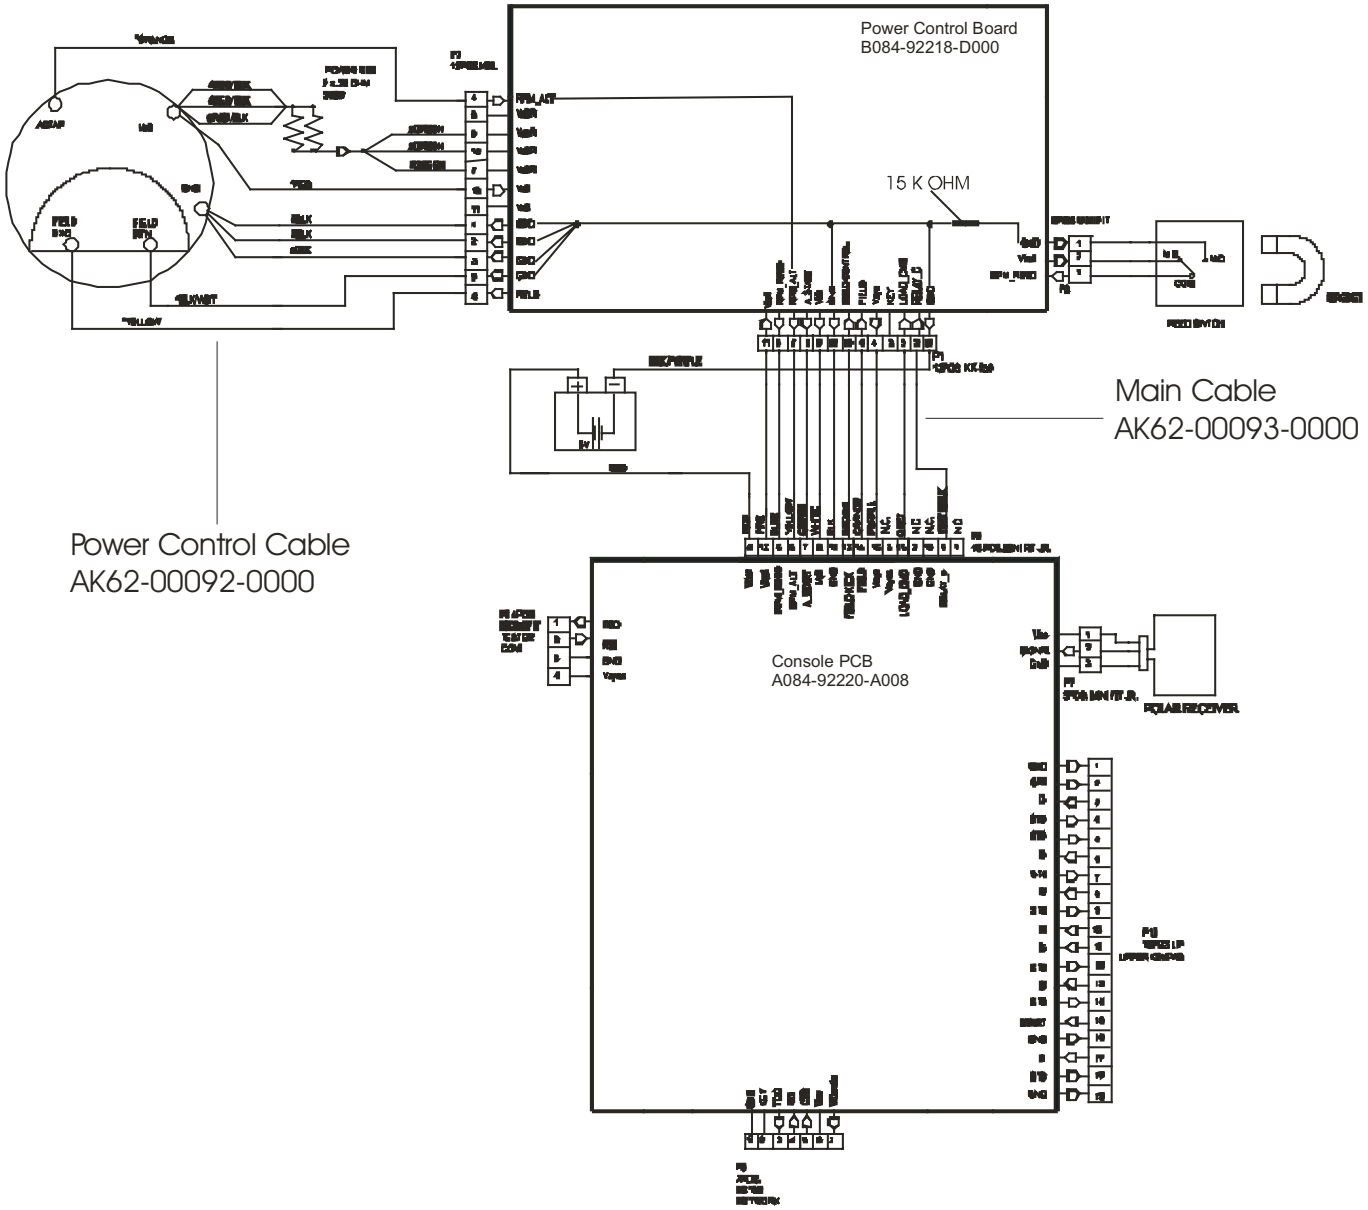
Power Control Board
B084-92218-D000
15 K OHM
Main Cable
AK62-00093-0000
Power Control Cable
AK62-00092-0000
Console PCB
A084-92220-A008